



1. Surface must be clean , dry and in sound condition prior to application.
2. Replace damaged expansion joints
3. Refer to the Kool Seal Specification for appropriate sealant or coating.