


**APPLY UNIFLEX SEALANT  
AT ALL CURB/DIVERTER  
METAL OVERLAPS**

**METAL PANEL LAPS  
WITH ORIGINAL  
SEALANT**

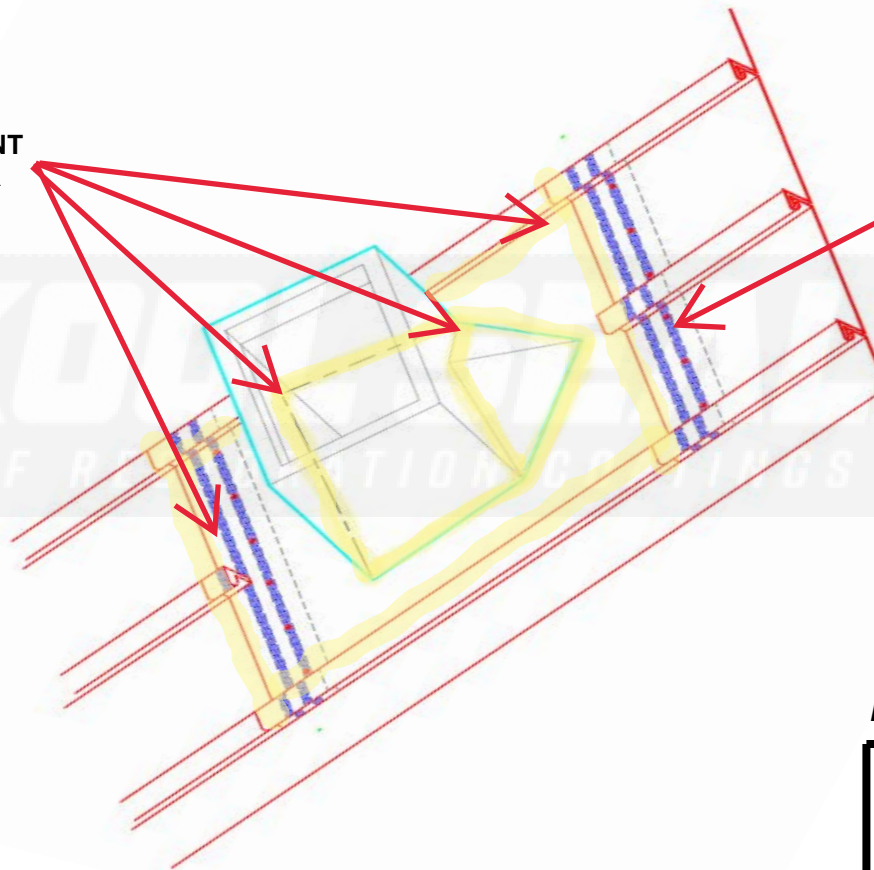

**Notes:**

1. Surface must be clean , dry and in sound condition prior to application.
2. Apply appropriate Rust Inhibitive Primer prior to application if corrosion is present.
3. Refer to the Kool Seal Specification for appropriate sealant or coating.